


Disconnecting or connecting your GTE phones

Desk model telephones

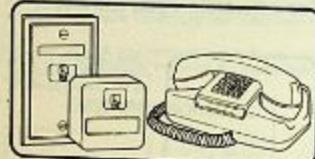


TO INSTALL

1. Line up the plug with the opening in the wall outlet. Be sure to have the locking tab on the plug at the bottom of the plug. Push the plug gently into the wall outlet until a 'click' is heard indicating the plug is in place.

TO REMOVE

Pull up the locking tab and pull the plug gently from the outlet.

Wall model telephones

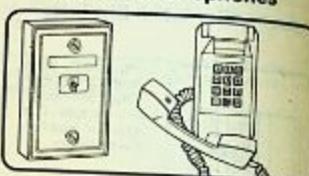

TO INSTALL

1. To install your wall phone, line up the plug on the back of the phone base with the wall outlet opening. The two locking pins on the face plate of the wall outlet will line up with two openings in the telephone base plate.




2. Hold down the chrome latching lever on the right side of the phone and push the telephone against the wall outlet so that the jack and plug are completely engaged. Then pull the wall assembly downward to engage the locking pins with the assembly.

3. Releasing the chrome latching lever will lock the telephone assembly to the wall outlet.



TO REMOVE

Depress the chrome latching lever while sliding the phone upward to release the locking pins. Then pull the phone away from the wall.

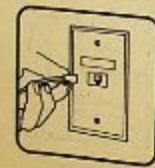

LOCAL CALLS

how to dial



	TO → FROM ↓	Akron	Argos	Atwood (Etna Green)	Bourbon	Burket	Clypool	Mantone	Millwood	Nappans	Silver Lake	Tippecanoe
Bourbon				X	*					X		X
Atwood (Etna Green)				*	X			X	X			
Burket						*	X	X				X
Mantone	X		X		X			*				
Millwood				X	X				*	*		
Tippecanoe		X		X				X				*

● = dial listed number.

✗ = dial listed number. A limited number of "Free Service" lines are available. If these lines are busy, calls may be placed as toll calls subject to the normal toll rates and regulations.

□ = call long distance (toll charge).